

Cavity Slider Kit Installation Instructions

Read this guide thoroughly before installation and follow the instructions.
This product is designed for lightweight interior doors. Do not use it on exterior or heavy metal doors.

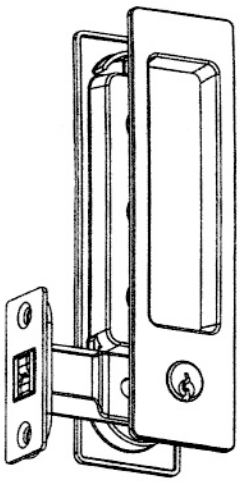

Entrance lock

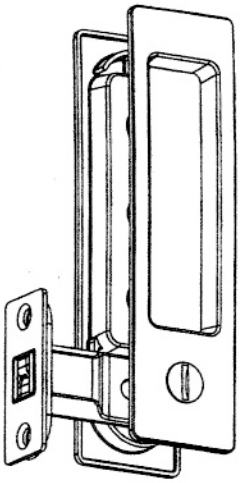

Privacy lock


1. Lock Body
Place template against the edge of the door, and drilling from both sides of the door, drill a series of 33mm diameter holes. Chisel out the remaining wood to create clearance to insert Flush Pull.

2. Latch
Holding the template firmly in place, drill a 25.4mm hole to a depth of 90mm. Insert the latch, draw around the faceplate and chisel out a 4mm recess to ensure it sits flush with the door.

3. Flush Pull
Remove the key. Insert the tail piece into the slot in the Flush Pull assembly as shown in the illustration, then insert the outside Flush Pull into the hole.
Turn the tail piece inside the door, making sure the latch operates smoothly. Install the inside Flush Pull assembly and check that the assembly will turn smoothly and that the tail piece is inserted into the knob slot. Screw correct length screw for your door width through the fixing holes. Replace the deco plate, which will be held in place by magnets.

4. Finger Pull
Choose the desired height for the finger pull, ensuring that you have marked the centre of the door accurately. Using a 25mm drillbit, bore a hole to 25mm depth. Insert adhesive into hole and press edge pull into the cavity.

5. Strike
Close the door against the frame and place the strike so that it lines up with the top of the latch. Chisel a 3mm recess depth and drill a hole for the dustbox. Use screws provided to secure strike.

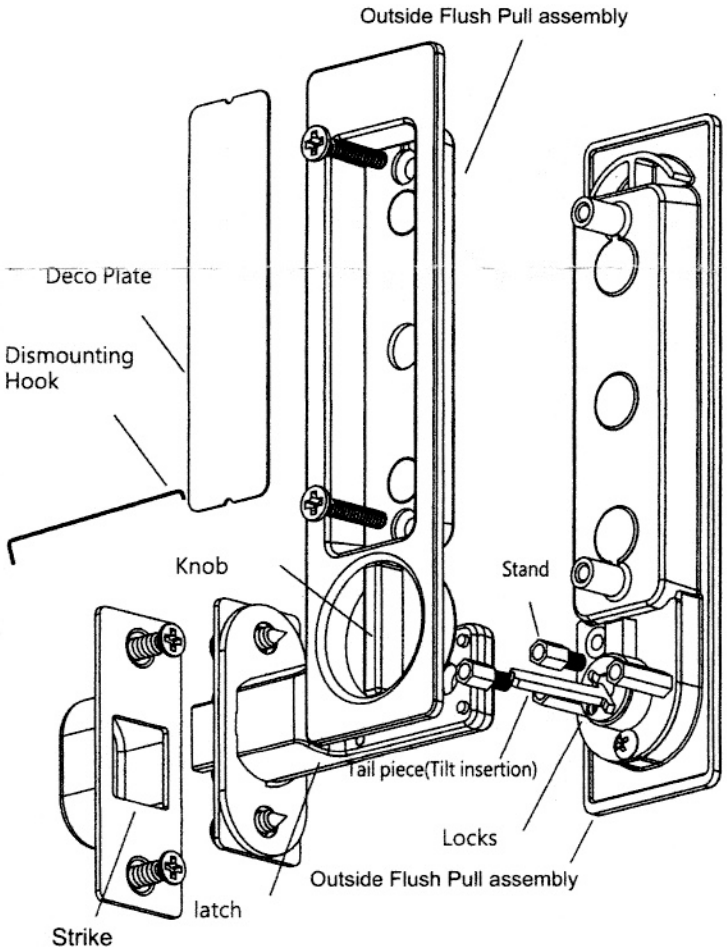

DOOR THICKNESS

Door thickness	Screw length
31~35 mm	12 mm
35~40 mm	18 mm
40~45 mm	22 mm
45~55 mm	28 mm

D.T.35~41 E


Entrance lock tail piece	
Door thickness	Tail piece length
33~38 mm	18 mm
38~45 mm	25 mm
44~51 mm	31 mm

D.T.31~36


Privacy lock tail piece	
Door thickness	Tail piece length
31~37 mm	29 mm
37~44 mm	36 mm
44~51 mm	43 mm

Template Unit : mm

Template for strike

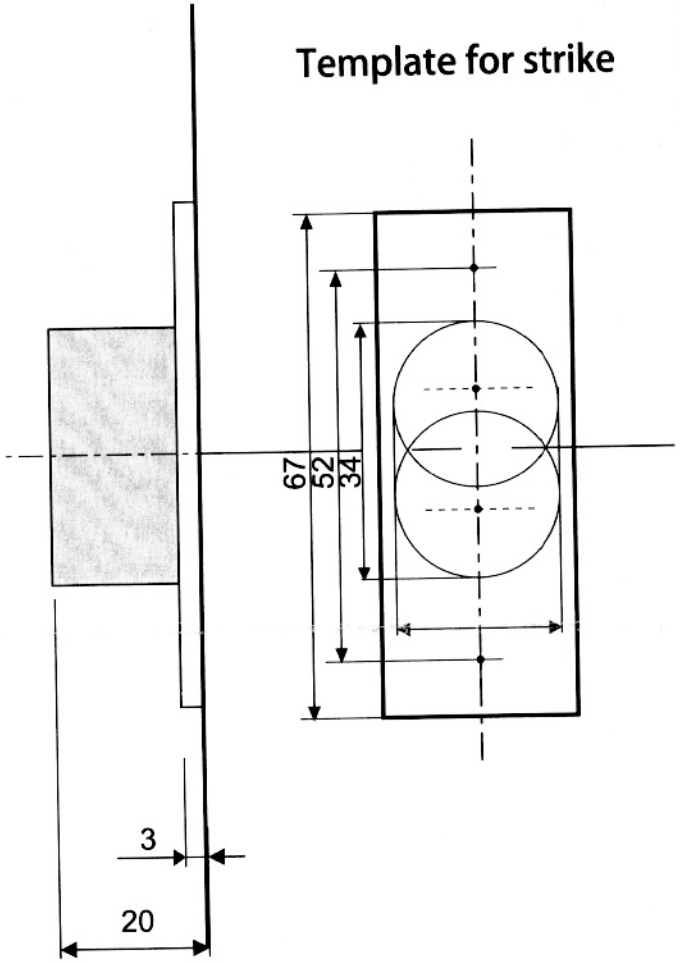

Template for latch

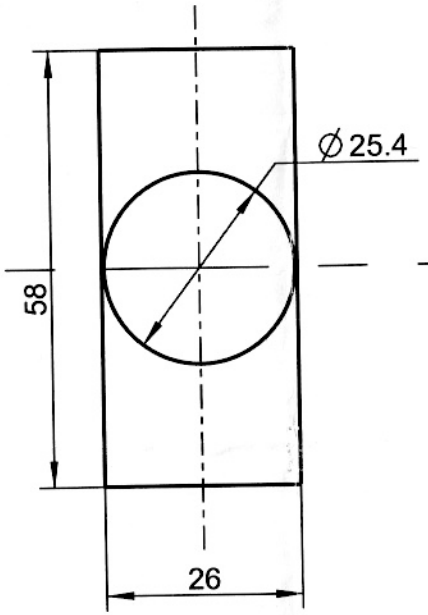

Door thickness centerline

Template for Flush Pull

